




MOUNTING INSTRUCTION SFC-Pads

Delivery contents

Delivery includes the StoreFrontControl Pads (SFC pads) as well as one network cable per pad and a holder with attached double-sided adhesive tape.

The „Set of 3 SFC Pads with Controller“ also includes an SFC controller and a USB cable. These are not included with the extension pads.

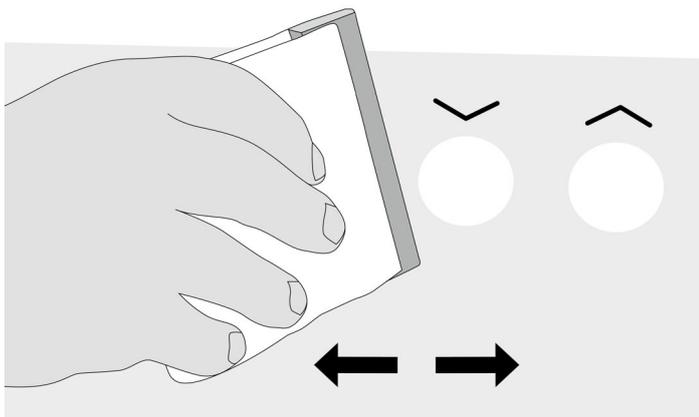


1

Cleaning the glass surface & applying the decorative foil

Clean your shop window thoroughly! The glass must be grease- and dust-free.

Then, apply your decorative foil on the cleaned glass surface. Remove any air bubbles by using a squeegee.

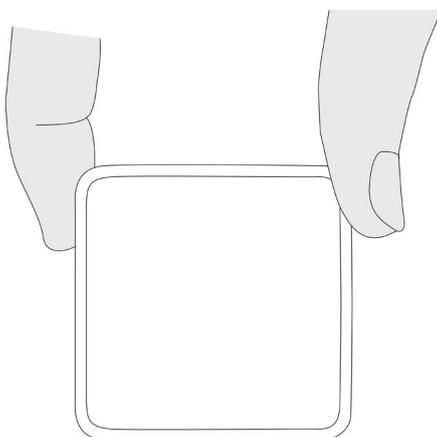


2

Position the SFC Pads

To position the bracket holders, clean the according areas of your shop window thoroughly. The pane must be free of grease and dust.


Remove the protective films from the adhesive strip of the holder. Determine the correct position of the SFC pad behind the design foil. We recommend the installation be done by two people. One person gives instructions from outside to place the Pads at the correct position behind the design foil. The second person inside sticks the bracket holders onto the glass.

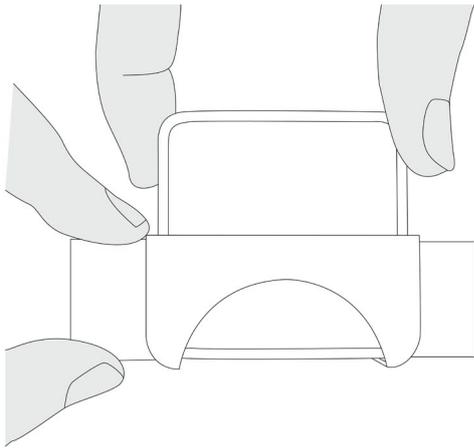

3 Attaching the bracket

Glue the holder onto the glass. The SFC Pad will not be removed for this.


Please note that the adhesive on the bracket holder is very strong, so it must be correctly positioned at the first attempt. Removing the holder, once it has been stuck to the glass, is only possible with considerable effort.

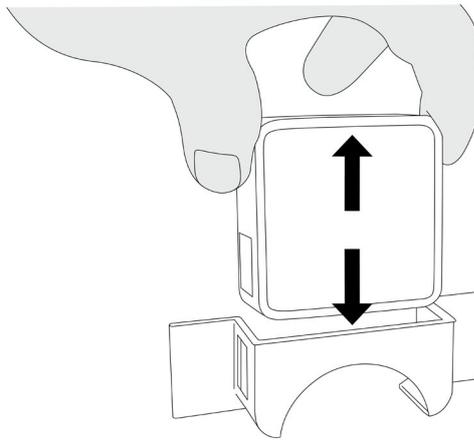

4 Remove or inserting the SFC Pad in the holder

The SFC Pad can be easily inserted or removed, by pushing it either upward or downward into the holders.


Please note that at this stage the network cable is not yet connected.

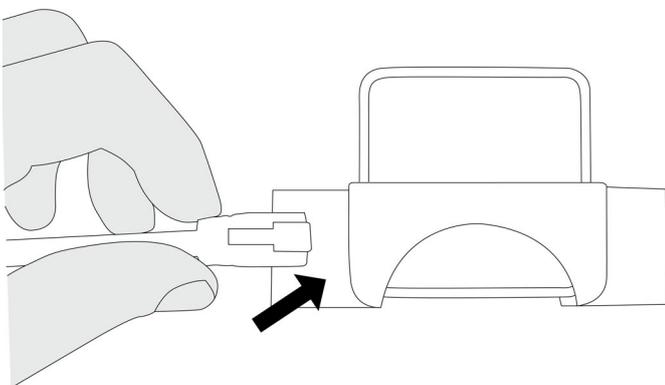

5 Connect USB cable

Attach one network cable to each SFC Pad and connect the second end to the SFC controller. The controller is connected to your computer via USB cable. If the supplied cables are too short, they can be replaced by standard network cables.

Please ensure that the same cable length is used for all SFC pads!

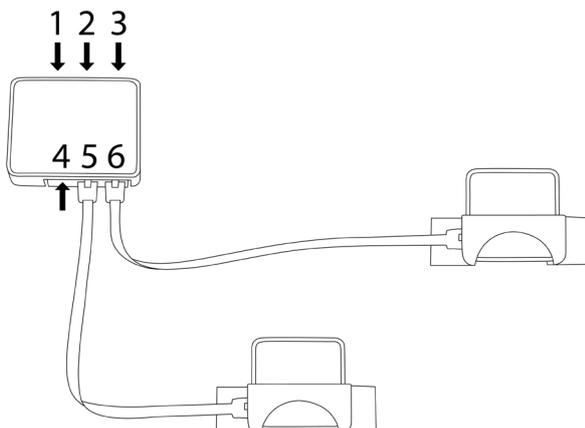

6 Key assignment & sensitivity

Wait a minute until the calibration is completed. If the automatic setting should not work, the sensitivity of the keys might have to be customized with the **SFC-Control-Panel** (www.interactive-displays.de/en/support).

The key assignment can also be set individually using this tool. Your SFC Pads are now ready for use.

Get in touch!